

blast onn.™

 
onn.™ • **Roku** Smart Soundbar
Quick Start Guide

Get ready for high quality sound and powerful streaming.



onn. • Roku Smart Soundbar



FRONT

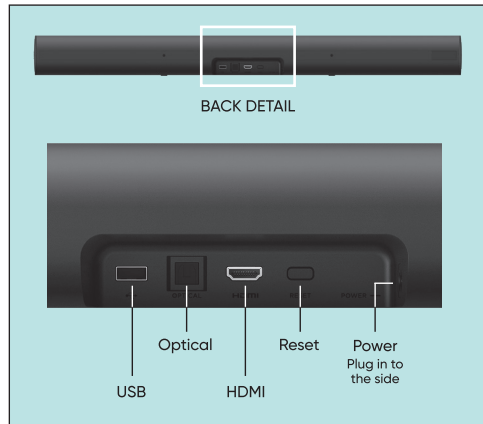

BACK DETAIL

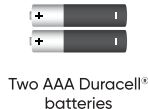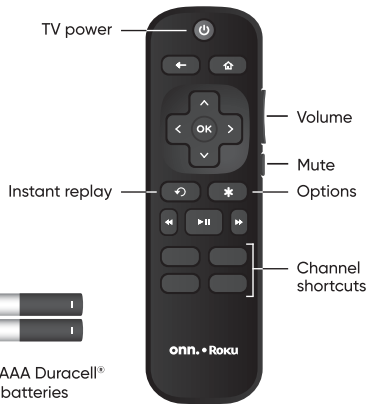

Two AAA Duracell® batteries



Power cable



Premium High Speed
HDMI® Cable



Optional
optical cable

NOTE: Only use if your
TV does not have an
HDMI ARC port.

What you'll need



Get ready to set up with:

Your TV
Your wireless network name and password
Your smartphone or computer

Have a Roku TV™?


Visit go.roku.com/onnsoundbar for a guided walkthrough.

Let's get started




1. Connect to Power

Use the included power cable to connect your Smart Soundbar to a wall outlet.

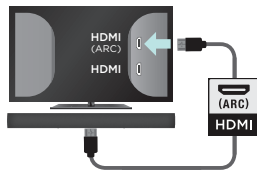


2. Connect to TV

Connect your Smart Soundbar to the HDMI port on your TV labeled "ARC" with the included cable.

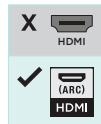

Don't see an HDMI-ARC port? Use the optical cable along with the HDMI Cable to connect.

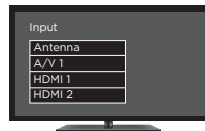

3. Select input

Use your TV remote to select the HDMI input you used to connect your Smart Soundbar.



4. Insert batteries

Slide open the battery cover on your remote to insert the included Duracell® batteries negative (-) ends in first.



5. Follow the on-screen setup

Follow the instructions on your TV to activate your Smart Soundbar and link or create a Roku account.

During setup, you may need to enable your TV's HDMI-CEC and ARC settings. TV manufacturers use different names for these settings, so refer to your TV manual or visit [go.roku.com/hdmihelp](https://www.roku.com/hdmihelp)



IMPORTANT: Activate your Smart Soundbar by using your computer or smartphone to link to a Roku account.

NOTE: Roku does not charge for activation support – beware of scams.

Common questions

What is HDMI-CEC?

Consumer Electronics Control (CEC) allows device commands to be sent over the same HDMI Cable as audio and video.

What is ARC?

Audio Return Channel (ARC) sends audio from your TV to the Smart Soundbar, using the HDMI Cable. Connect the Smart Soundbar to the HDMI port labelled "ARC" on your TV.

How do I enable HDMI-CEC and ARC on my TV?

While some TVs automatically enable these features, others require you to enable them via a settings menu. TV manufacturers use different names for these settings, so refer to your TV manual or visit go.roku.com/hdmihelp

Why do I need to create a Roku® account?

Before you can start streaming, channels must be downloaded and installed on your Smart Soundbar. You'll need a Roku account to access the Roku Channel Store, manage your subscriptions, view your purchase history, and add a payment method. For more info, visit go.roku.com/whyaccount

Why should I enter a credit card?

Saving a payment method makes it easy to rent or buy movies on demand, subscribe to popular services, and enroll in free trials. Charges will not be made without your authorization. For more information, visit go.roku.com/paymenthelp

Easily expandable

For even deeper,
richer bass



onn. • Roku
Wireless Subwoofer

Sold separately.

Tips and Tricks

Sound Settings


Automatic Volume Leveling—

Helps keep your volume consistent and quiets loud commercials.

Speech Clarity—Improves clarity of voices so your favorite TV is easier to hear.

Night Mode—Lowers loud scenes while boosting quiet ones so you don't wake the house.

Using Sound Settings

While streaming video, press .

Go to **Sound Settings**.

Turn on the settings you want.

Using voice commands

Press and hold the microphone button* and say things like:

"Play classic rock."

"Set volume to 30."

"Launch The Roku Channel"

Pairing a Bluetooth® device

Select the **Bluetooth** channel tile on your home screen.

Follow the on-screen instructions.

*Requires a Roku voice compatible remote or Roku mobile app.

For more, visit: go.roku.com/onnsoundbar

**We'd love to hear from you.
Scan with your Walmart app and
let us know what you think.**



4100000545_1

© 2019 Walmart Inc. ONN is a trademark of Walmart Inc. All rights reserved.

© 2019 Roku, Inc. All rights reserved. ROKU, ROKU TV and the ROKU logo are the trademarks of Roku, Inc. Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries. All other logos and trademarks herein not owned by Roku, Inc. are the property of their respective owners.