


ROKU

Outdoor
Camera SE

**Quick Start
Guide**

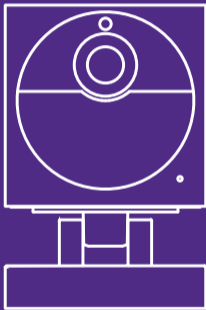




For the best experience

Charge your camera before setup

To charge camera: First, plug your base station into power. Using the base station's USB port, connect the charging cable to the micro USB port on the back of your camera.


What's included





- A** Roku Outdoor Camera SE
- B** Camera charging USB cable
- C** 24mm M3 screws (x2)
- D** Drywall anchors (x2)
- E** Removable magnetic mounting base
- F** Base station
- G** Base station power adaptor
- H** Base station ethernet cable

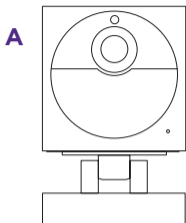


What you'll need

- Phillips screwdriver
- Your smartphone

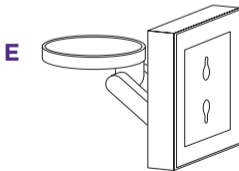

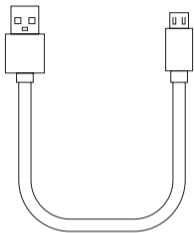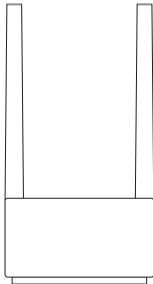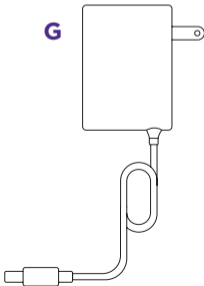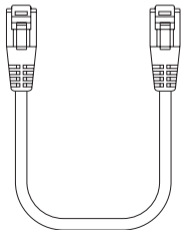B**C****D****F****G****H**

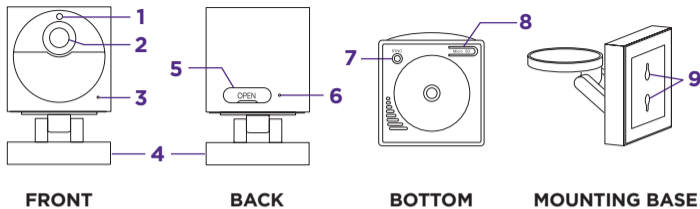


-
- 1** Light sensor
 - 2** Lens
 - 3** Microphone
 - 4** Removable magnetic mounting base
 - 5** On/off switch & USB charging port
 - 6** Status light
 - 7** Sync button
 - 8** MicroSD slot
(Card sold separately)
 - 9** Mounting holes

Let's get started

STEP 1: Download the Roku Smart Home app

Scan the QR code below to download the Roku Smart Home app on your smartphone. Sign in with your Roku account or create one.


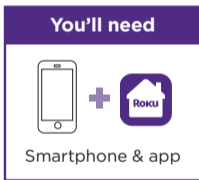


Message & data rates may apply.



STEP 2: Install your camera

In the Roku Smart Home app, tap the “+” button, then “**Add Device**” to find “**Outdoor Camera.**” Follow the instructions to finish setup.

WALL MOUNT

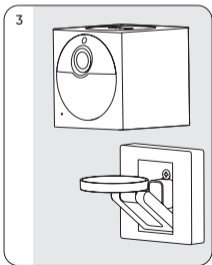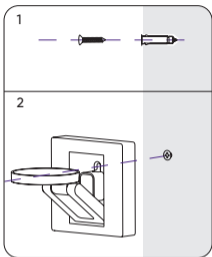

CEILING MOUNT

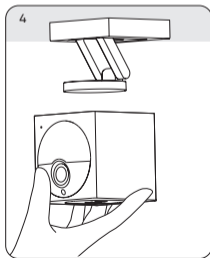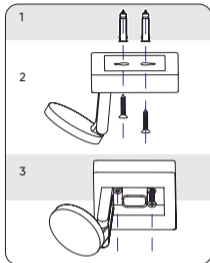

What's that light mean?

Status Light	Status
YELLOW - Solid	Powered on and beginning setup
YELLOW and BLUE - Flashing	Pairing to base station
BLUE - Flashing	Connecting to Wi-Fi®
BLUE - Solid	Connected and working
RED - Flashing	Charging
RED - Solid	Fully charged
NO LIGHT	Powered off or sleeping

Status lights are located on the camera and base station.



More features are waiting

Unlock the full potential
of your camera with a
Roku Smart Home Subscription.

Learn more at go.roku.com/rokusmarthome

PRECAUTIONS

1. Prolonged direct sunlight can heat the inside of your camera past its maximum operating temperature of 122°F (50°C). Avoid directly sunlight where possible and only use your camera in environments within its operating temperature range: -4° to 122°F (-20° to 50°C).
2. To charge your camera, plug the included micro USB cable into the USB port on your base station and connect it to your camera. Or use a power adapter and cable that will provide 5V/2A power.

FCC WARNING

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RADIATION EXPOSURE STATEMENT

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

CONTAINS A LITHIUM ION BATTERY

Always dispose of batteries following local recycling guidelines. Do not dispose of batteries in household waste or open fire. For more information about recycling and the battery included, see: <https://support.roku.com/article/208755678>

Need help?



Setup
videos



Common
questions



Tips and
tricks

Visit go.roku.com/cameras

ROKU

© 2022 Roku, Inc. All rights reserved. Roku, the Roku logo, Roku Smart Home, and the Roku Smart Home logo are the trademarks or registered trademarks of Roku, Inc.

4100000864_02