Roku Outdoor Wired Camera SE

Quick Start Guide

 


What's included

- A Roku Outdoor Wired Camera SE
- B Outdoor power adaptor
- C Camera mounting kit
 - 1. Mounting screws and anchors (x2)
 - 2. Wall plate
 - 3. Mounting tape
- Outdoor power adaptor mounting kit
 - 1. Wire clips (x4)
 - 2. Mounting screws and anchors (x6)

What you'll need

- Phillips screwdriver (if mounting)
- Your smartphone

 


 














- Status light
- 2 Lens
- 3 Microphone
- 4 Speaker
- 5 Power cable
- 6 MicroSD card slot (Card sold separately)
- Setup button
- 8 1/4" mount (Unscrew to access)
- 9 Mounting hole

Let's get started

STEP 1: Download the Roku Smart Home app

Scan the QR code below to download the Roku Smart Home app on your smartphone. Sign in with your Roku account or create one.





Message & data rates may apply.

STEP 2: Install your camera

In the Roku Smart Home app, tap the "+" button, then "Add Device" to find "Outdoor Wired Camera." Follow the instructions to finish setup.

What's that light mean? During setup Status

RED - Solid	Powered on and beginning setup
RED - Flashing	Ready to connect
RED & BLUE - Flashing	Connecting to Wi-Fi*

Connected

and finishing setup

BLUE -

Flashing

After setup	Status
RED - Solid	Viewing live stream or recording in progress
RED - Quickly flashing	Siren in use
BLUE -	Connected

and working

Solid











More features are waiting

Unlock the full potential of your camera with a Roku Smart Home Subscription.

Learn more at go.roku.com/rokusmarthome

FCC RADIATION EXPOSURE STATEMENT

This equipment complies with ECC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

PRECAUTIONS

Prolonged direct sunlight can heat the inside of your camera past its maximum operating temperature of 113°F (45°C). Avoid direct sunlight where possible and only use your camera and power adaptor in environments within their operating temperature range: Camera: -3° to 113°F (-20° to 45°C) Power adaptor: -22° to 122°F (-30° to 50°C)

FCC WARNING

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the ECC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television recention, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the
 equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Need help?





Visit go.roku.com/cameras

Roku

© 2022 Roku, Inc. All rights reserved. Roku, the Roku logo, Roku Smart Home, and the Roku Smart Home logo are the trademarks or registered trademarks of Roku, Inc.