


Roku[®]

50" 4K HDR TV

 
Quick Start Guide

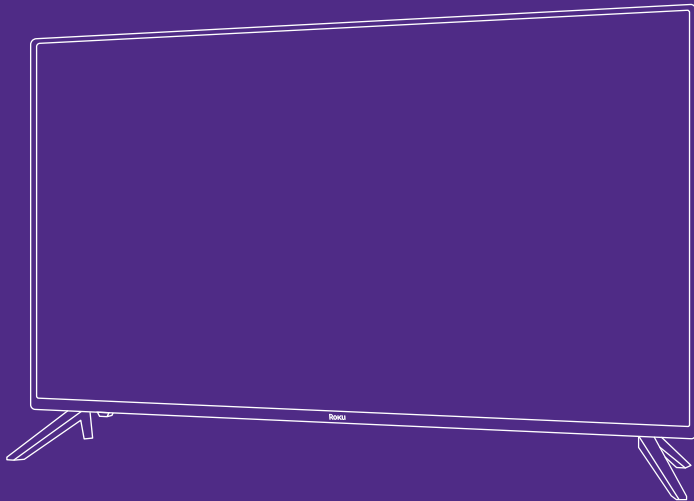


What's included




Roku 50" 4K HDR TV



TV stands

 

Stand screws
x 4

 


Pre-installed
AAA batteries
x 2




Roku
TV Remote

 What you need



Phillips head
screwdriver

 


Laptop or mobile
phone for activation



Internet connection

STEP 1: Set up your TV

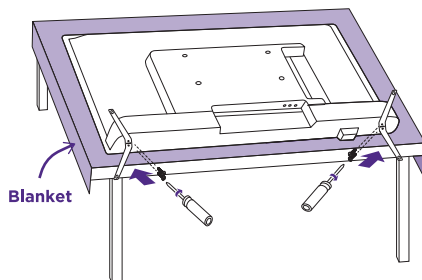

A Prepare a surface

Put a soft covering like a blanket down onto a clean, flat surface (make sure it's larger than the TV) and place the TV on it.

B Attach the stands


Use a screwdriver and included screws to attach the stands.

C Set TV upright


Place your TV on a stable, flat surface.

Mounting your TV?

For instructions, skip these steps and visit go.roku.com/TV

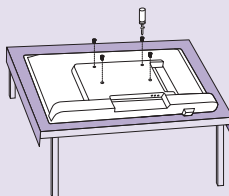


STEP 2: Plug TV in and activate remote

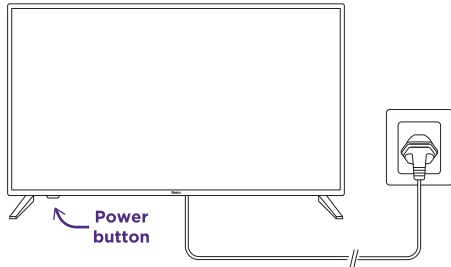

A Connect your TV

Plug your TV into a power outlet. It should turn on automatically. If it doesn't, press the power button.

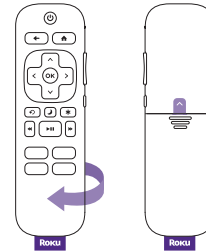

B Activate your remote

Pull the tab on the back and you're ready to go. No pairing required.

Get to know your TV

Video connections

HDMI - Game consoles, DVD players

Composite - Analog devices, older game consoles

Antenna/Cable - Digital antenna, cable connection

Audio connections

HDMI eARC - AV receivers, soundbars (recommended)


Optical (S/PDIF) - AV receivers, soundbars

Audio Out/Headphone - Wired headphones


Other connections

USB - Flash drive

LAN - Wired internet connection

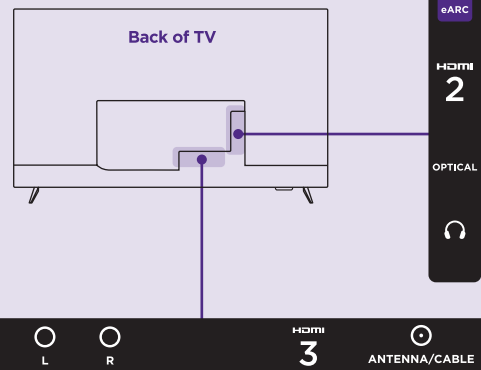

STEP 3: Activate your TV

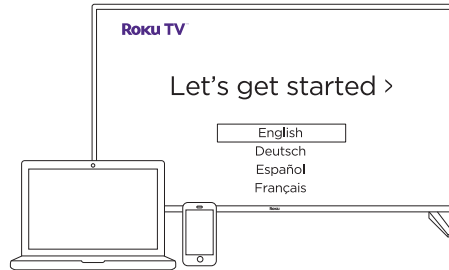

Connect to internet

Follow the instructions on your TV screen. Activate your TV by using your computer or smartphone to link a Roku account.



IMPORTANT

Roku never charges for activation support.

Need help?

For help with setup, video tutorials, and more visit go.roku.com/TV

Remote features



Sleep timer

Set and adjust scheduled shut-off times for your TV.



Pre-set channel shortcuts


Launch popular streaming channels in just a press.



Options button

On the home screen:
Opens the channel settings menu.

While streaming:
Opens sound and picture settings.

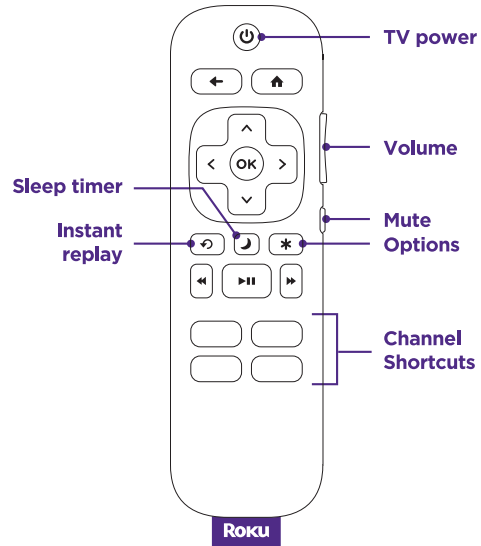

Frequently asked questions

Why do I need an internet connection?

You'll need an internet connection to set up your TV, stream your favorite channels and for automatic software updates.

Why should I enter a credit card?

Saving a payment method makes it easy to rent or buy movies, subscribe to popular channels, and start free trials in just a click. No charges will be made without your authorization.

Need help?

For setup help or support, visit or call

go.roku.com/TV

1-816-272-8106

4:00 am - 8:00 pm PT



© 2024 Roku, Inc. All Rights Reserved. Roku, the Roku logo, and the purple d-pad and purple fabric tag designs are trademarks or registered trademarks of Roku, Inc.

4100001105_01