



# **Roku** Streaming Stick 4K

Quick Start Guide

## What's included




Roku® Streaming Stick® 4K



Two pre-installed  
AAA batteries



USB power cable  
with long-range Wi-Fi® receiver

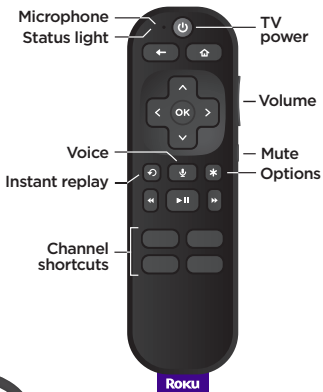


Remote




Power  
adaptor

## Details

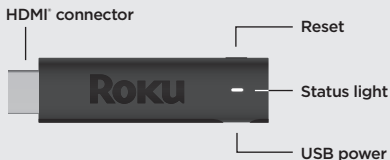

# Let's get started

1

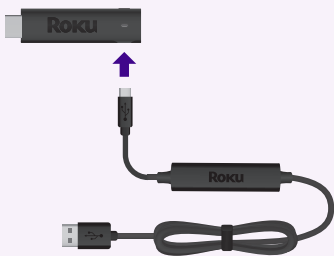


## STEP 1: Connect your streaming player

Plug the USB power cable into your streaming player. We recommend keeping the power cable coiled in the velcro wrap.

### TIP:

For help setting up your device, visit [go.roku.com/rss4k](https://www.roku.com/rss4k)


2

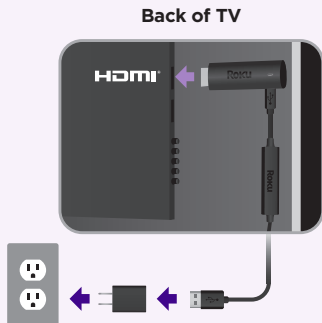


## STEP 2: Connect to TV

For the best streaming experience, use the included USB power cable and power adaptor to connect your streaming player to a wall outlet.

**DOESN'T FIT?** Order a free HDMI extender cable at [my.roku.com/hdmi](https://www.roku.com/hdmi)

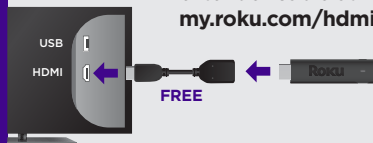

OR

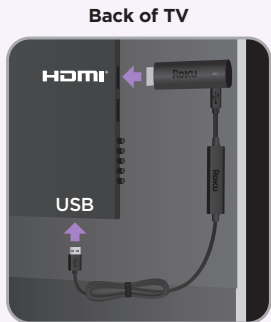


Or use the included USB power cable to connect to the USB port on your TV.

See **Wi-Fi® tips** on the back of this guide for more information.

**NOTE: See a red light on your streaming player?**

That means the USB port on your TV is not providing enough power. Use the included power adaptor instead.

3

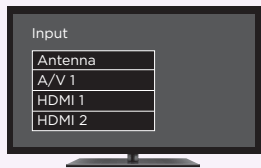

**STEP 3: Select input**

Use your TV remote to power on your TV and select the input (source) you used to connect your streaming player.

4




### STEP 4: Pair your remote

Pull out the battery tab on the back of your remote. It will pair to your streaming player automatically.

#### TIP:

For more help, visit [go.roku.com/remotepair](https://www.roku.com/remotepair)

5

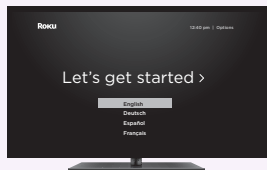

### STEP 5: Follow on-screen setup

Follow the instructions on your TV screen. Activate your streaming player by using your computer or smartphone to link a Roku account.

#### IMPORTANT:

Roku never charges for activation support.

## Tips for better Wi-Fi® performance



**Back of TV\***

**DO**

For the best performance, separate the Wi-Fi® receiver from other cables behind your TV.



**Back of TV\***

**DO NOT**

To minimize interference, do not place the Wi-Fi® receiver near exposed input ports or resting on other electronic devices.

\*For illustration only

## **Common questions**

### **Why do I need to create a Roku account?**

You'll need a Roku account to stream, add channels, easily manage subscriptions, rent movies, and more.

### **Why do I need to enter a credit card?**

Saving a payment method makes it easy to rent or buy movies, subscribe to popular channels, and start free trials in just a click. No charges will be made without your authorization.

### **What type of voice commands can I use with this remote?**

“Play classic rock”

“Turn captions on”

“Launch The Roku Channel”

“Skip 30 seconds”

“Show me action movies”

**Visit [go.roku.com/rss4k](https://go.roku.com/rss4k) for more information**

**Need more help?**

[support.roku.com](https://support.roku.com)



**Video  
tutorials**



**Wi-Fi®  
help**

**Cut cable.  
Save money.  
Stream big.**

[streamandsave.com](https://streamandsave.com)



**Free  
TV**



**Live  
TV**

**See what's  
streaming for free,  
tips, and more**

[roku.com/blog](https://roku.com/blog)

**Follow us**



**Roku**

© 2022 Roku, Inc. All rights reserved. Roku, the Roku logo, and STREAMING STICK are the registered trademarks of Roku, Inc. All other logos and trademarks herein not owned by Roku, Inc. are the property of their respective owners.



410000813\_02