

Just wait until you feel this

Roku Wireless Bass Pro

Quick Start Guide

What's included




FRONT



BACK

Status LED
Reset
Power

Roku Wireless Bass Pro

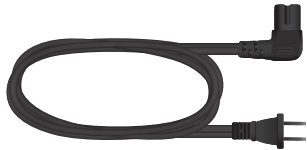

Power cable

What you'll need




To set up, you'll need:

- One of these...
 - Roku® Streambar®
 - Roku® Streambar® Pro
 - Roku Smart Soundbar
 - Roku TV™ with Roku Wireless Speakers
- Your Roku remote

Let's get started

1

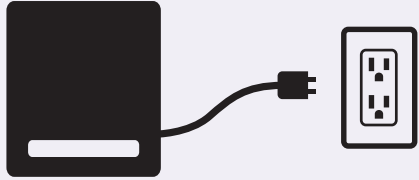

STEP 1: Connect to power


Place your subwoofer anywhere within 30 feet of your TV and plug it into a power outlet.

The status LED on the back of your subwoofer should begin to blink. If it doesn't, press and hold the Reset button for 10 seconds.

2




STEP 2: Prepare to connect

Press and hold  on your Roku remote for 5 seconds to open the setup menu.

Select **Subwoofer**.

3

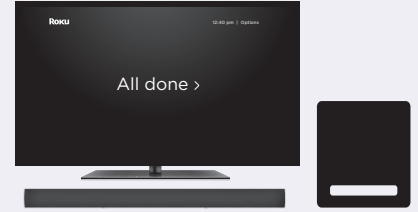


STEP 3: Follow on-screen setup

Your subwoofer will begin pairing automatically. A test sound will play once pairing is complete.

Visit go.roku.com/subwoofer for more information

Place wherever you want

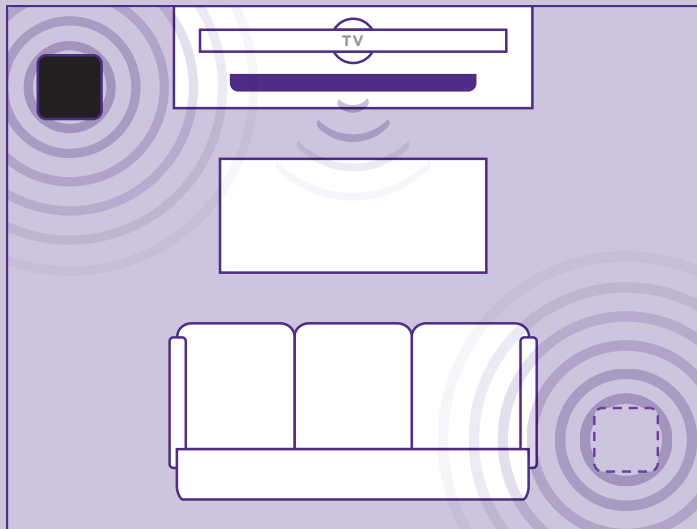

Wirelessly connects up to 30 feet
from your TV.

Need more help?

support.roku.com



Video
tutorials



Wi-Fi®
help

See what's
streaming for free,
tips, and more

roku.com/blog

Follow us



ROKU

© 2022 Roku, Inc. All rights reserved. Roku, Roku TV, the Roku logo, and Streambar are the trademarks of Roku, Inc. All other logos and trademarks herein not owned by Roku, Inc. are the property of their respective owners.



4100000594_03