 


Just wait until you feel this

Roku Wireless Bass

Quick Start Guide

What's included

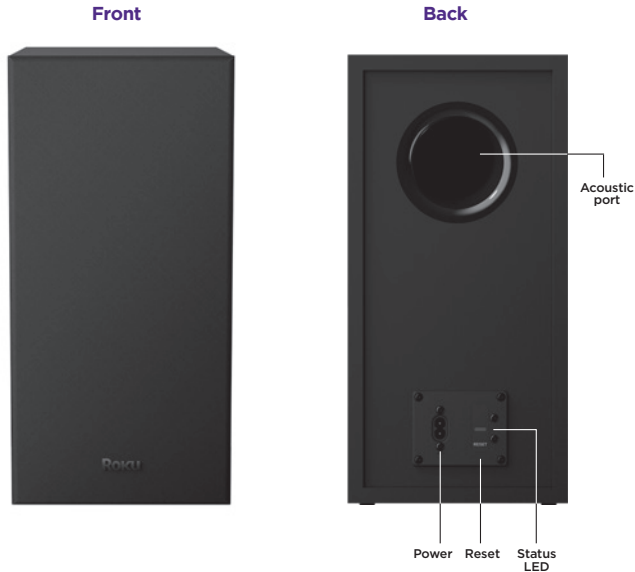 


Roku Wireless Bass



Power cable


What you'll need

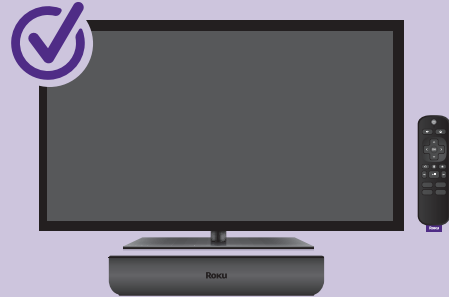

To set up, you'll need:

- One of these...
 - Roku® Streambar®
 - Roku® Streambar® Pro
 - Roku Smart Soundbar
 - Roku TV™ with Roku Wireless Speakers
- Your Roku remote

 Let's get started

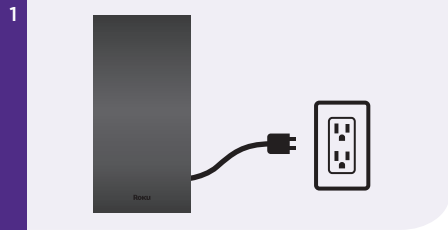


STEP 1: Connect to power

Place your subwoofer anywhere within 30 feet of your TV and plug it into a power outlet.

 
The status LED on the back of your subwoofer should begin to blink. If it doesn't, press and hold the Reset button for 10 seconds.



STEP 2: Prepare to connect

Press and hold  on your Roku remote for 5 seconds to open the setup menu.

Select **Subwoofer**.

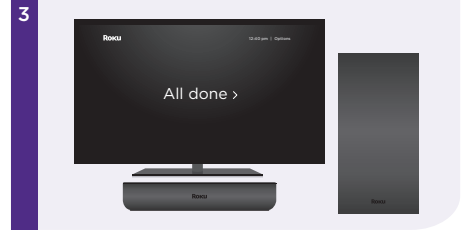


STEP 3: Follow on-screen setup

Your subwoofer will begin pairing automatically. A test sound will play once pairing is complete.

Visit [go.roku.com/subwoofer](https://www.roku.com/subwoofer) for more information

 Place wherever you want

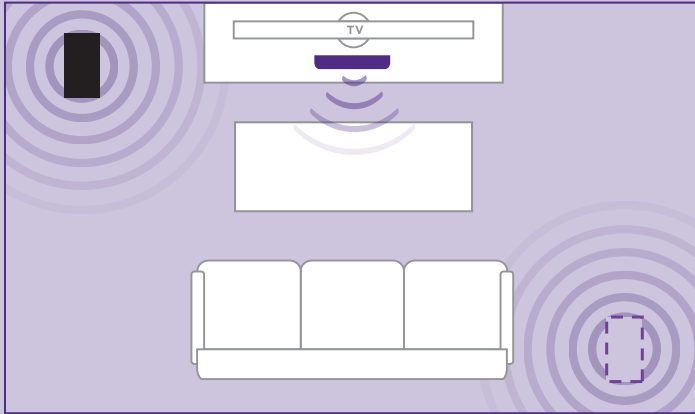

**Wirelessly connects up to 30 feet
from your TV.**

Need more help?

support.roku.com



**Video
tutorials**



**Wi-Fi®
help**

**See what's
streaming for free,
tips, and more**

roku.com/blog

Follow us



ROKU[®]

© 2022 Roku, Inc. All rights reserved. Roku, Roku TV, the Roku logo, and Streambar are the trademarks of Roku, Inc. All other logos and trademarks herein not owned by Roku, Inc. are the property of their respective owners.



4100000808_02