

# ROKU®

Select Series  
HD TV

## Quick Start Guide



# Need help?

For setup help or support, visit or call

[go.roku.com/TV](https://go.roku.com/TV)

---

**1-816-272-8106**

4:00 am - 8:00 pm PT




Message & data rates may apply.




© 2023 Roku, Inc. All Rights Reserved. Roku, the Roku logo, and the purple d-pad and purple fabric tag designs are trademarks or registered trademarks of Roku, Inc.

4100000912\_03


## What's included

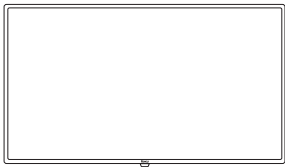


Roku Select Series HD TV

 

TV stands

 

Stand screws  
x 4

 


Pre-installed  
AAA batteries  
x 2




Roku  
Voice Remote

## What you need

 

Phillips head  
screwdriver

 


Laptop or mobile  
phone for activation



Internet connection

## STEP 1: Set up your TV

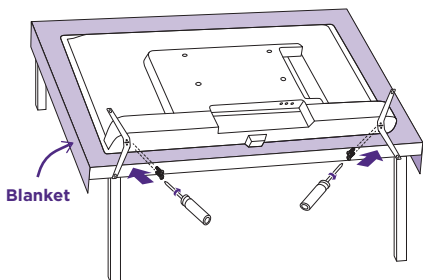

### **A** Prepare a surface

Put a soft covering like a blanket down onto a clean, flat surface (make sure it's larger than the TV) and place the TV on it.

### **B** Attach the stands


Use a screwdriver and included screws to attach the stands.

### **C** Set TV upright


Place your TV on a stable, flat surface.

## Mounting your TV?

For instructions, skip these steps and visit [go.roku.com/TV](http://go.roku.com/TV)

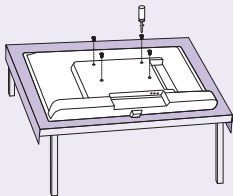


## STEP 2: Plug TV in and pair remote

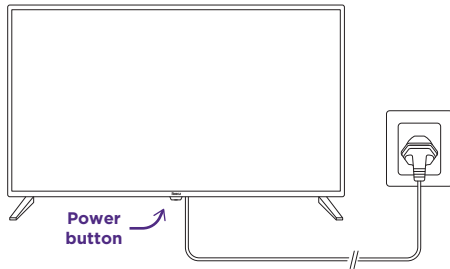

### A Connect your TV

Plug your TV into a power outlet. It should turn on automatically. If it doesn't, press the power button.

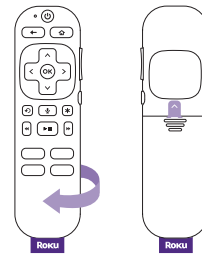

### B Pair your remote

Pull out the battery tab on the back of your remote. It will pair to your TV automatically.

## Get to know your TV

### Video connections

**HDMI** - Game consoles, DVD players

**Composite** - Analog devices, older game consoles

**Antenna/Cable** - Digital antenna, cable connection

### Audio connections


**HDMI ARC** - AV receivers, soundbars (recommended)

**Optical (S/PDIF)** - AV receivers, soundbars


**Audio Out/Headphone** - Wired headphones

### Other connections

**USB** - Flash drive

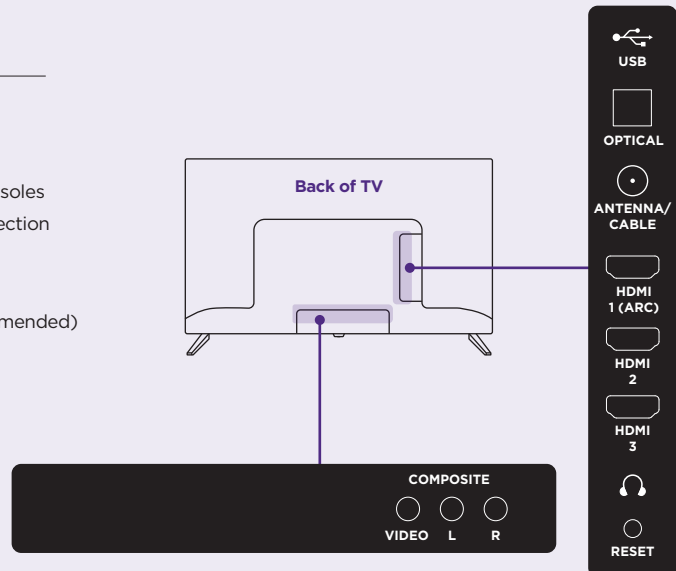

## STEP 3: Activate your TV

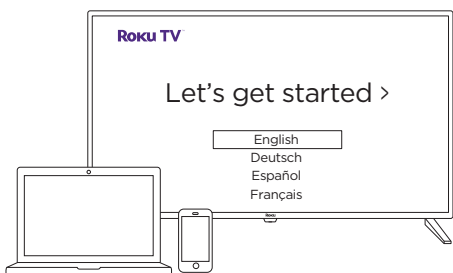

### Connect to internet

Follow the instructions on your TV screen. Activate your TV by using your computer or smartphone to link a Roku account.



### IMPORTANT

Roku never charges for activation support.

## Need help?

For help with setup, video tutorials, and more visit [go.roku.com/TV](https://www.roku.com/TV)

## Remote features



### Voice control

Quickly search across thousands of channels, switch inputs, and control your TV with your voice.



### Pre-set channel shortcuts


Launch popular streaming channels in just a press.



### Options button

**On the home screen:**  
Opens the channel settings menu.

**While streaming:**  
Opens sound and picture settings.

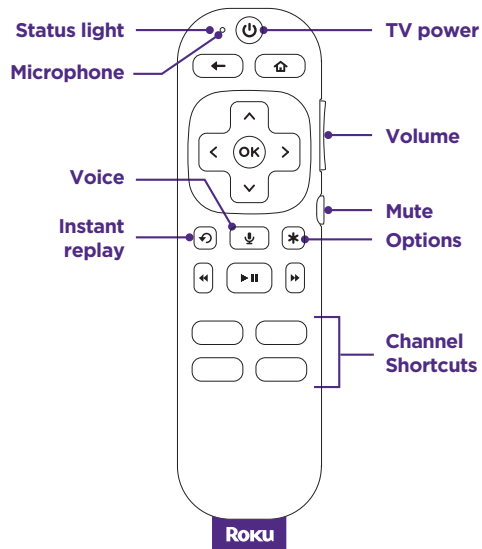



## Frequently asked questions

### Why do I need an internet connection?

You'll need an internet connection to set up your TV, stream your favorite channels and for automatic software updates.

### Having trouble pairing your remote?

If you don't see a remote pairing alert on your TV screen, press and hold the home  and right arrow  buttons for 5 seconds.

### Why should I enter a credit card?

Saving a payment method makes it easy to rent or buy movies, subscribe to popular channels, and start free trials in just a click. No charges will be made without your authorization.

### What type of voice commands can I use with this remote?

- "Play classic rock"
- "Turn captions on"
- "Launch The Roku Channel"
- "Skip 30 seconds"
- "Show me action movies"